



# EQUITRAINER

## zender

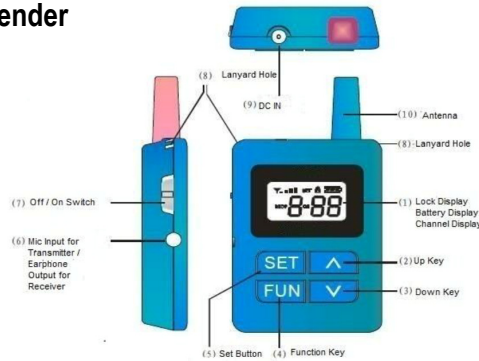

## ontvanger

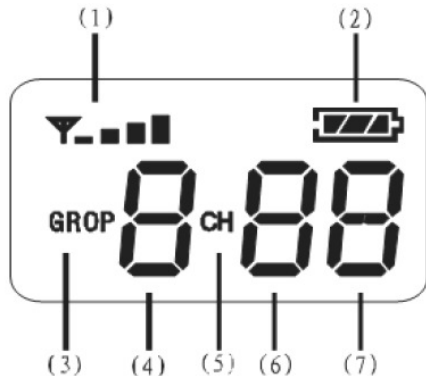

## Uw instructiesysteem is gebruiksklaar bij ontvangst.

Alle systemen zijn getest en ingesteld voor eerste gebruik

**Schakel zender (7) in / uit:** schakelaar omhoog is ingeschakeld; schakelaar naar beneden is uitgeschakeld, één cijfer (4) op het linkerscherm voor weergave van het volume en dubbele cijfers (6-7) op het rechterscherm voor kanaalweergave.

U kunt de **ontvanger inschakelen** door op de aan / uit-schakelaar (1) te drukken en hem even vast te houden totdat de LED begint te knipperen. **Uitschakelen ontvanger** druk op de aan/uit schakelaar en hou deze ingedrukt tot de led rood oplicht en niet meer knippert.

**Kanaalinstelling:** de equitrainer-ontvanger heeft geen kanaal- en volumeweergave, ze worden allemaal (kanaal, volume en modus) in de zender getoond. Zender heeft twee functies: Managerfunctie en zenderfunctie.

De eerste stap is de **Manager-functie** (instellen systeem) van de zender: We gebruiken de zender in managerfunctie door zowel de zender als ook de ontvanger uit te zetten.

Druk op de zender de "FUN" knop (4) in en hou die vast, zet vervolgens de zender aan met de aan/uit knop (7).

De zender staat nu in manager functie. Zichtbaar aan het knipperen van "set"bovenin het display.

U kunt nu met de pijltjes knoppen (2-3) een kanaal instellen voor de ontvanger.

Wanneer u klaar bent met het instellen van het kanaal op de zender, schakel dan de ontvanger in (1), u zult de rode indicator zien flikkeren, even wachten en u hoort een hele zachte "beep" Dan de zender uitzetten en weer aanzetten,

Als alles goed is gegaan ziet u na het aanzetten van de zender het indicatielichtje op de ontvanger snel flikkeren, hetgeen wil zeggen dat er een verbinding is.

De tweede functie van de zender is de **normale werkmodus:**

De zender en ontvanger(s) hebben een geheugenfunctie; zodra de kanaalinstellingen zijn gemaakt, zullen ze in het geheugen staan van de apparaten en hoeft u dat niet elke keer in te stellen.

**Zendervolume regelen:** Wanneer de zender is ingeschakeld, gebruikt u de pijltjes-knoppen (2-3) om het volume van de microfoon te regelen. stand 0 is micro uit, stand 4 is maximaal micro volume

**Volumeregeling ontvanger:** druk herhaaldelijk op de volumeknop (2) om het volume aan te passen.

LET OP u kunt ook bij de ontvanger het geluid op 0 zetten.

**Opladen ontvanger:** Wanneer u de ontvanger inschakelt, en het indicatielampje traag knippert **als ook de zender aanstaat** betekent dat de batterij laag of leeg is.

De ontvanger moet dan worden opgeladen.

**Batterijstatus bij de zender** staat in het display rechts boven.

## Opladen batterij pack in het algemeen.

Zorg ervoor dat alle apparaten uit staan wanneer er wordt opgeladen. Het rode indicatielampje van de equitrainer ontvanger zal knipperen tijdens het opladen, wanneer het rood indicatielampje blijft branden en stopt met flikkeren is de ontvanger opgeladen.

De oplaadtijd is ongeveer 2-4 uur en **vermijd overladen.**

## EQUITRAINER samen met EQUICOACH

**Kanaal instellen als u de equitrainer gebruikt in combinatie met de equicoach.**

Zet equicoach uit (alle units). Druk bij een van de equicoach apparaten de V knop in en hou die vast, zet vervolgens de equicoach aan.

De equicoach staat nu in manager functie en met de + en—knop kunt u kanaal instellen.

Nu de equitrainer aanzetten en even wachten op de beep, uw equitrainer staat nu op het zelfde kanaal als de equicoach.

Equicoach even uit en aan zetten en uw systeem in geprogrammeerd.

Bij de equitrainer kunt u dat zien aan het snel knipperende verbindigs ledje.

## De equitrainer heeft alleen een luisterfunctie !!!!!!!

### Specificaties:

afstand: 100-150 Meters

kanalen: 100 Channels

audio Input: Microphone/Audio(Line in)

output: Earphone/Audio (3.5mm)

power Supply: Lithium Battery Build in

maten: 70mm X 25mm X 12mm

gewicht equitrainer Receiver: 18 Grams

## Vragen / opmerkingen

Axsolutions



Oranjestraat 1 H

4571 HN Axel

Netherlands

0031 6 5388 5390

# EQUITRAINER

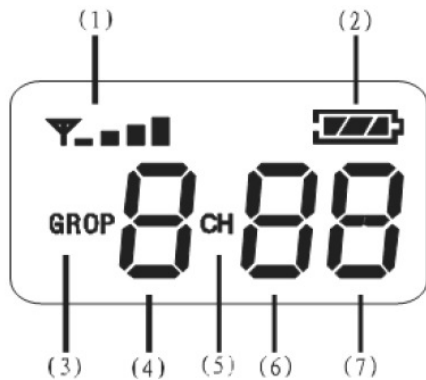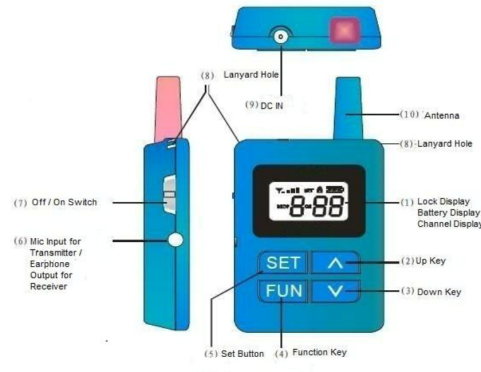

## Your instruction system is ready for use

All systems have been tested and set for first use

**Switch On/Off transmitter:** Switch up is on; switch down is off, one digit number on the left screen for volume display and double digit number on the right screen for channel display.

You can **switch on the receiver** by pressing the on / off switch (1) and hold it for a moment until the LED starts flashing.

**Channel Setting:** The equitrainer receiver without channel and volume display, they are all (channel, volume and mode) can be showed in transmitter.

Transmitter has two functions: Manager Function and Transmitter Function.

The first step is **Manager function** of Transmitter: We use the transmitter as manager function by using combination button setting ("FUN" and "Switch on" button), you can use the button "up" and "down" ("∧" and "∨") for channel setting. When you finished setting the channel on transmitter, turn on receiver you will see the red indicator light are flickering, that is to say they had in same channel already. And then switch off transmitter and switch on again, when you see the red indicator light of receiver are quick flickering, they will receive signal and in the working mode.

The second step is **normal working mode**: When you finished setting the channel on transmitter and receivers by using manager function, turn off transmitter and turn on it again, they are all in working mode and you can use them normally.

(The transmitter and receivers have memory function, once channel setting successfully, they will match automatically in same channel when you use them next time and do not have to set again)

**Transmitter volume Control:** When transmitter is switch on, use "∧" and "∨" to adjust volume. For example: Choose from 1 - 4 will transmit a larger sound for audio data input.

**Receiver volume Control:** Press the volume control button to adjust for suitable volume.

**Charging:** When you switch on the receiver, the red indicator light is become slow flickering, it means the battery low or out of battery, the receiver needs to be charged.

**Switch receiver off,** press the on / off switch and hold until LED no longer flickers and turns red.

### Reminding:

Please make sure all devices in the state of switch off when charging. The red indicator light of equitrainer receiver will be keep flickering when on the charging, when the red indicator light keep on and stop flickering, which is full charged. Charging time is around 2-4 hours and please **avoid over charge**.

## EQUITRAINER together with EQUICOACH

Set channel when using the equitrainer in combination with the equicoach.

Turn equicoach off (all units). Press and hold the V button on one of the equicoach devices, then turn on the equicoach.

The equicoach is now in manager function and with the + and -button you can set channel.

Now turn on the equitrainer and wait for the beep, your equitrainer is now on the same channel as the equicoach.

Equicoach to switch off and on and program your system.

With the equitrainer you can see that on the rapidly flashing connection LED.

**The equitrainer only has a listening function !!!!!**

### Specifications:

Distance: 100-150 Meters

Channel: 100 Channels

Audio Input: Microphone/Audio(Line in)

Output: Earphone/Audio (3.5mm)

Power Supply: Lithium Battery Build in

Dimension: 70mm X 25mm X 12mm

Weight of equitrainer Receiver: 18 Grams

### questions / comments

Axsolutions

Oranjestraat 1 H

4571 HN Axel

Netherlands

0031 6 5388 5390

info@axhippo.nl